




ANTHONY WOODFORD RACING

Upgraded Trailing Links Installation Guide

Tools needed: 17mm Wrench, 17mm Socket Wrench

Step 1: Remove the two 12mm nuts that secure the parking brake cable to the stock trailing link.

Step 2: Remove 17mm bolt from stock trailing link where it bolts to the frame.

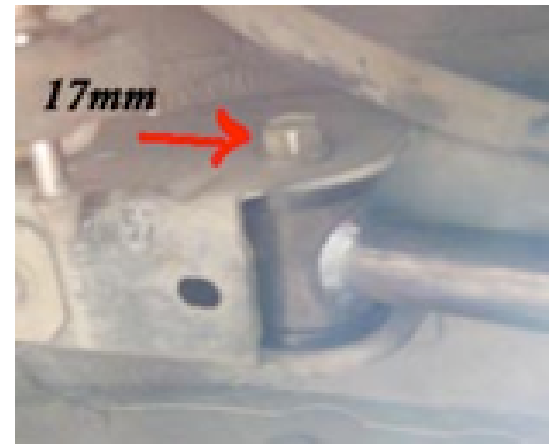

Step 3: Remove 17mm bolt from the stock trailing links where it bolts to the wheel hub.

Step 4: Follow reverse order to install new trailing links. Be sure to grease the bushings before you install the links. Repeat steps 1-4 on opposite side.